

## Key Finder



### Instruction

A Bluetooth 4.0 Low Energy device Key Finder works with Bluetooth 4.0 ready smart devices (iOS 7.0\* and Android 4.4\*), such as iPhone4s/5/5s/5c/6/6s/6plus/7/7plus, iPad3/Mini/Air, SamsungS4/S5/S6/Note3/Note4 and etc. It communicates with free App and works as key finder, anti-lost alarm and camera remote shutter.

#### Box Contained

1. Key Finder
2. Keychain
3. User manual
4. One extra battery

#### Setting up a new Key Finder

1. Download and install the app from Apple App Store or Google Play by searching 'Easykeyfinder' (old version) or 'Easykeyfind' (new version)
2. Press the button 3 seconds to activate Key Finder when use it for the first time. Buzzer would beep and blue LED indicator will flash three times.
3. Open the app, click  to open the list, click  to connect the key finder.
4. Rename Key Finder in the app.

#### Using new Key Finder

Attach the new Key Finder to your key or any other valuable item you don't want to lose.

1. Key Finder/Locator

Tap the Scan icon  in the app to connect with Key Finder, then tap the  icon to locate the Key Finder.


2. Remote Shutter

Tap the camera icon to launch camera in the app. Press the button on the Key Finder to trigger the phone take picture or video.

3. Bidirectional Anti-lost Alarm

When Key Finder goes out of safety range, both the app and the Key Finder will alert you with sound and flash for anti-lost.

4. Bidirectional Finding

Press the button on the Key Finder to find the phone, and press the icon  in the app can let your phone find the key finder with your belongings.

5. Lost Location History

When connection was broken, the app will add a pushpin on the map. It can inform you when and where lost the Key Finder.

6. Mute Function for iOS system only


A. Do Not Disturb Mode-Once switch on the smart devices and the key finder would not alarm whether the connection is broken or not.

B. Security Zone- Connected with the current same wifi, mute could be set in the application for a certain time when the smart devices and key finder would not alarm even though the connection is broken.

7. Change photos of each connected Key Finder (only Easykeyfind App has this function)

Change photos of each connected Key Finder, to remind you each Key Finder stays with which belongings like wallet, key, bag, kids, pets and so on, and let you know clearly which one disconnected when out of safety range.

A. For iOS, under the device list, tap the  icon after each connected Key Finder, and then can take and change photo.

B. For Android, under settings, tap the  icon after 'Change item photo', and then take and change photo.

#### Specification:

Dimensions: L50mm x W30mm x H5mm(R666), D37mm x T9mm(R631)  
L38mm x W38mm x H9mm(R633), D31mm x T5.4mm(R621)

Weight: 12g(R631/R633/R666), 5g(R621)

Wireless: Bluetooth 4.0 (Bluetooth Low Energy)

Range: 0~35meters

Buzzer: 80dB(R631/R633/R666), 60dB(R621)

Indicator: Blue LED

Temperature Range: -20 °C to +70 °C

Waterproof: IP67(R631/R633 only)

#### Replacing the battery

1. Unscrew the outer shell for R621/R666. Use the plastic plate to open the R631/R633
2. Replace battery, please mind the polarity of battery.
3. Close and tighten the outer shell.

#### Safety instruction

1. The Key Finder can not be used without installing and running the App on your phone.
2. Keep it dry and away from moisture and corrosive material.
3. Do not disassemble this product or attempt to repair or modify it in any manner.
4. Battery and battery-cab are included in the product. They are all small parts to children. The product should not be used without the adult supervision in case children swallow or get choked by these small parts. Consult your doctor immediately if that happens.
5. All products have gone through a thorough quality assurance inspection, feel free to use it.
6. Always return used button batteries to your local battery-recycling center.